



Stop! Read this manual carefully before using this product!

Manual Covers The Following Products	Maximum Capacity	Maximum Suggested Weight Load
Freefall Pontoon Slide	ONE (1)	200 lbs. (91 kg)

Contents:

Freefall Pontoon Slide – (1) Freefall slide tube, (4) straps, (1) 12v Turbo Pump, (1) Repair Kit

Watersports Safety Code

Watersports are fun and challenging but involve inherent risks of injury or death. To increase your enjoyment of the sport and to reduce your risks, use common sense and follow these rules:

Before you start:

- Familiarize yourself with all applicable federal, state, and local laws, the risks inherent in the sport, and the proper use of the equipment.
- Know the waterways.
- Use caution and common sense.
- Only for use on pontoon boat. Do not use on any other craft. Do not use in swimming pools.
- Do not use within 15 ft (4.5 m) of other boats, docks, or any other hard obstructions.
- Do not use in shallow water! Minimum water depth is 8 ft (2.4 m).
- Do not jump or dive from the product.
- Do not attempt or allow somersaults. Landing on the head or neck can cause serious injury, paralysis or death.
- Never use at night, or in low-light conditions.
- Never use in poor weather conditions, excessive wind, waves or lightning.
- Do not use on dry land.
- Do not use without proper anchoring.
- Do not slide head first or swim under the product.
- Always ensure that the swimming area around the product is free of submerged logs, rocks and sandbars. Ask about the local water conditions before use.
- Only allow use of the product with proper supervision. Secure the product when not in use to prevent access by any other users.

Your equipment :

- Check all equipment prior to use. Inspect your Freefall for missing, defective or worn parts. Never use the product if excessive wear or damage are detected.
- Always check for proper inflation before each use. Temperature and environmental changes can cause changes in tube pressure. Using the product over or under inflated is dangerous and can cause damage to the product, voiding the warranty.
- Always check security of the anchor(s) and all attachments before each use.
- Always wear a flotation vest (PFD) as required by the authorities in area of use.

It is the owner's responsibility to read the owner's manual and instruct all users in the safe operation of these products. By inflating these products you hereby agree to the Release of Liability, Claim Waiver, and Assumption of Risk Agreement in this manual. Please read this manual prior to inflating and using these products and keep for future reference. As with any action sport, recklessness, inexperience, misuse, or neglect of the equipment may result in serious injury or death.

WARNING

USE OF THIS PRODUCT AND PARTICIPATION IN WATERSPORTS INVOLVES INHERENT RISKS OF INJURY OR DEATH.

- This product should never be used by children except under adult supervision.
- Not intended for use by children under 5 years of age.
- This product is not a personal flotation device.
- Always wear a flotation vest (PFD) as required by the authorities in area of use.
- Never place wrists or feet through handles.
- Do not use in shallow water (less than 8 ft [2.4 m] deep).
- Do not use within 15 ft (4.5 m) of shore, docks, pilings or other hard objects.
- Never swim under this product.
- Do not jump or dive from this product.
- Do not exceed the manufacturer's recommended number of users for this particular product.
- Do not use while under the influence of alcohol or drugs.
- Read Operator's Manual before use.

Made in China

CAUTION

Watersports can be safe and fun for all levels of enthusiasts. The Operator's Manual is presented to enhance your enjoyment of the sport. It is intended to alert you to some of the potentially dangerous conditions that can arise in all watersports. It is the owner's responsibility to read the owner's manual and instruct all users in the safe operation of these products. By inflating these products you hereby agree to the Release of Liability, Claim Waiver, and Assumption of Risk Agreement in the Owner's Manual.

To reduce the risk of injury or death, follow these guidelines:

- Carefully read the product Owner's Manual and follow the instructions.
- Take all reasonable precautions in the use and operation of your trampoline and/or aquapark.
- Teach anyone using your trampoline and/or aquapark about safe guidelines prior to use.
- Know your own limits. Stop when you are tired. Act responsibly. Be in good physical condition and be cautious in your use of this or any other water sports product.
- Periodically check mooring bridles and/or lines to ensure safety. Replace any portion of mooring and/or connection system that shows signs of wear.
- Do not add any hardware or attachments not otherwise supplied by the manufacturer.

THE WARNINGS AND PRACTICES SET FORTH ABOVE REPRESENT SOME COMMON RISKS ENCOUNTERED BY USERS AND DOES NOT PURPORT TO COVER ALL INSTANCES OF RISK OR DANGER. PLEASE USE COMMON SENSE AND GOOD JUDGMENT.

Please contact the dealer or manufacturer of this product if you have any questions about proper selection, function, or safe use of this product.

THE WARNINGS AND PRACTICES SET FORTH ABOVE IN THE WATERSPORTS SAFETY CODE REPRESENT SOME COMMON RISKS ENCOUNTERED BY USERS. THE CODE DOES NOT PURPORT TO COVER ALL INSTANCES OF RISK OR DANGER. PLEASE USE COMMON SENSE AND GOOD JUDGMENT.

Please contact us if you have any questions on the proper selection, function, or safe use of this product.

Assembly

NOTE: Freefall™ Pontoon Slide is for pontoon boat use ONLY. The slide is NOT for use without a boat, and NOT for use on any other type of vessel. Before assembly take the time to confirm that your boat meets a few important criteria. The slide installs OVER the existing seats on most pontoon boats, but you MUST confirm the fit as follows. DO NOT USE THIS PRODUCT IF YOUR BOAT DOES NOT MEET THE CRITERIA, as personal injury or death may occur. It is important to take accurate measurements in the area that the slide will be installed. See CONFIRM THE FIT diagram on this page.

1) Measure the height of the guard rail from the deck to the top of the railing. The guard rail MUST be GREATER THAN 20" and less than 30" tall. See STEP 1 in CONFIRM THE FIT diagram.

2) Locate an area for the slide. Slide area MUST be AT LEAST 36" wide, and BETWEEN 26" - 30" from guard rail to front of seat. See STEP 2 for reference.

3) To maintain the stability of the slide, it is very important to brace the item properly using webbing straps (provided). Measure the distance from the slide area to vertical supports in the railing. The distance to a solid vertical brace point must be AT LEAST 15" away and NOT MORE THAN 50" away from the slide area on EACH SIDE. See STEP 3 for reference.

4) Once the fit is confirmed, unfold the Freefall slide completely and position it in the slide area. While still deflated, drape the slide over the seat and guard rail in the slide area, positioning the steps and warnings toward the inside of the boat.

5) Open the 12v Turbo Pump (provided) and review the operating instructions. The pump draws 33A of electrical current, and must be connected directly to the 12v battery terminals using alligator clips provided. Prepare to inflate the slide using the Halkey-Roberts type fitting, attached.

6) The Main Valve (Halkey-Roberts type) is located on the left hand side of the slide near the boarding steps. Remove valve cover and push valve plunger in. Twist the valve stem 90 degrees to open or close the 1-Way valve feature. Valve should be CLOSED for inflation. This prevents air from escaping once the pump turns off. It is not necessary to open the valve during inflation, the pump fitting will automatically open the valve. See valve diagram for details.

7) Insert the pump fitting and twist 90 degrees to the right to lock into place. Turn pump on and inflate the slide to 1.0 psi (.069 bar). After inflation, replace valve cover. Slide should be firm and tight when completely inflated. **DO NOT OVER-FILL.** Excessively high pressure can cause damage to the product and may void the warranty. Carefully monitor air pressure in the product especially during hot weather.

WARNING: Do not use an air compressor to inflate tube. Air compressors are designed for high pressure inflation and can cause tube to burst if over-inflated.

WARNING: Do not use the product without adequate air pressure - 1.0 p.s.i..



CONFIRM THE FIT

Freefall™ Pontoon Slide is for PONTON BOAT use ONLY. The slide is NOT for use without a boat, and NOT for use on any other type of vessel. BEFORE ASSEMBLY, take the time to confirm that your pontoon boat meets the following criteria. Improper installation may result in personal injury or death.

STEP 2
Slide area must be at least 36" wide and 26" - 30" from rail to front of seat

STEP 3
Distance to vertical brace point is AT LEAST 15" and LESS THAN 50" (each side of slide)

STEP 1
Guard rail MUST be 20" - 30" tall

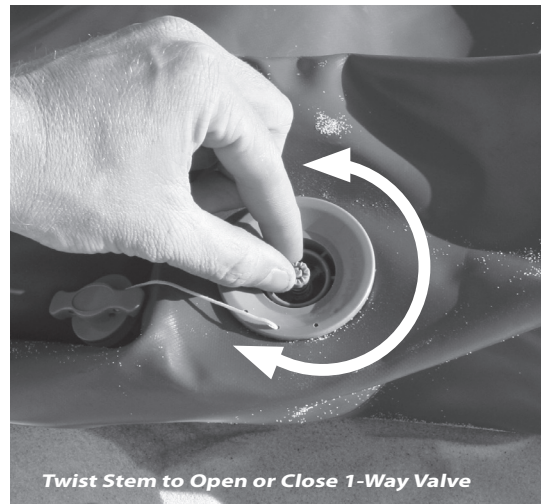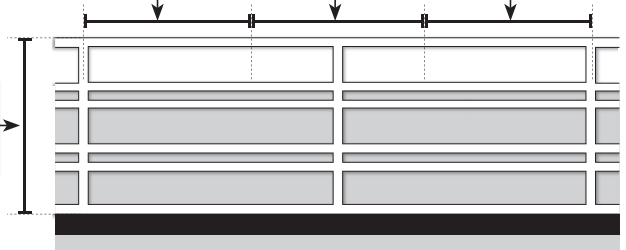


WARNING

TO REDUCE THE RISK OF INJURY OR DEATH, FOLLOW THESE GUIDELINES:

- Do not jump or dive from the product.
- Do not slide head-first.
- Do not stand on the top of the product.
- Do not follow other slide users.
- Make sure that swimmers have cleared the entry zone before entering water.
- Do not exceed product weight capacity of 200 lbs (91 kg).
- For Pontoon boat use only. Do not use without boat, or on any other vessel.
- Do not use while boat is moving. ONLY for stationary use.
- Do not use without adequate air pressure - 1.0 p.s.i. minimum

THE WARNINGS AND PRACTICES SET FORTH ABOVE REPRESENT SOME COMMON RISKS ENCOUNTERED BY USERS AND DOES NOT PURPORT TO COVER ALL INSTANCES OF RISK OR DANGER. PLEASE USE COMMON SENSE AND GOOD JUDGMENT.

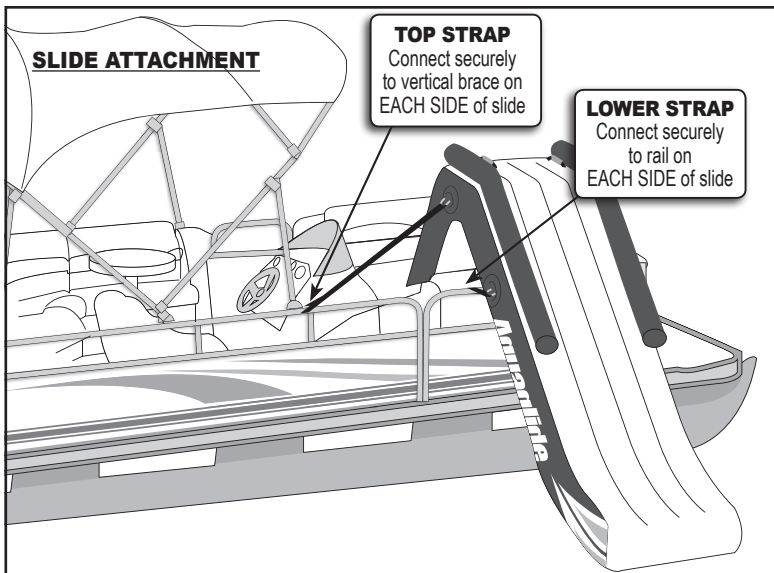

8) Inflate the 2 Guard Rail Chambers found at the top of the Freefall slide using the same Halkey-Roberts type fitting. Guard rails should be inflated to 1.0 psi (.069 bar), or until they are firm.

9) Next, use the LOWER STRAPS to attach the slide securely to the pontoon boat's railing on BOTH SIDES of the slide. Once connected, double check that each strap is fastened snugly and well secured. See SLIDE ATTACHMENT diagram for details.

10) Last, use the TOP STRAPS to brace the slide securely. The goal is to prevent any side to side movement of the slide, as this could cause loss of balance and personal injury. The Top Straps MUST be secured to the pontoon boat's railing AT A VERTICAL BRACE located between 15" (38 cm) and 50" (127 cm) from each side of the slide. Once connected, double check that each strap is fastened snugly and well secured. Before use, confirm the proper setup by manually pulling the slide from side to side; there should be very little, to no movement. See SLIDE ATTACHMENT diagram for details.

Operation

1) Choose a proper location to use your Freefall Pontoon slide. There should be a MINIMUM of 8 ft. (2.4 m) water depth beneath the slide. Choose an area protected from the wind and boat traffic. Review local rules and restrictions with your local authorities.

2) Carefully check the water and seabed below the selected area for sharp or dangerous objects (i.e. rocks or stumps).

3) Keep a safe distance of AT LEAST 15 ft (4.5 m) from docks, boats, boat lifts, and any other structures. DO NOT tie the product to a dock!

4) DO NOT use without properly anchoring the slide to the pontoon boat as described in ASSEMBLY.

5) DO NOT use without properly anchoring the pontoon boat, as it may be possible to accidentally drift into a dangerous area. NEVER use while boat is moving.

6) If strong winds, storms or adverse weather are expected, it is best to remove the product from the water and secure or store it.

7) Maintain supervision at all times during use. Children should NEVER use the product unattended.

8) The MAXIMUM number of users is ONE person at a time. The MAXIMUM weight capacity is 200 lbs (91 kg.). DO NOT exceed the recommended number of users or capacity.

9) **USE COMMON SENSE.** DO NOT jump or dive from the product.

10) DO NOT allow anyone to stand on the top of the product because motion could cause a loss of balance and injury.

11) DO NOT follow other slide users. Ensure that all swimmers have cleared the area before entering the water.

12) DO NOT swim underneath the product.

13) DO NOT slide headfirst, as personal injury could occur.

14) If the product shows any signs of instability or appears to have lost air pressure, immediately discontinue use. Check and monitor webbing straps, air pressure and air-holding ability regularly. Do not continue use until these are confirmed.

Care and Maintenance

1) While your product has been initially treated with UV protectant, long-term exposure to sunlight will damage the product. Regularly apply a UV protectant to the exposed surface of the tube to ensure the life of your product. We recommend using ONLY 303 UV Protectant intended for use on vinyl for this purpose. Monthly application while the product is in use is required. NOT DOING THIS WILL VOID THE WARRANTY. 303 UV Protectant is available at most watersports dealers, or online at www.303-products.com.

2) **WARNING:** Certain products, especially petroleum-based solvents, cleaners and protectants such as ArmorAll can damage the product and use of these products will void the warranty.

3) **WARNING:** Use of a high-pressure washer will damage the product and void the warranty. To clean, use a soft bristle brush with mild soap and fresh water. 303 UV Protectant contains a 'safe for vinyl' cleaner, and can be used to clean and protect the product at the same time.

4) Check the inflation of your tube often. It may appear to have lost air early in the morning, but will expand once the sun warms it. Maximum expansion will occur in the heat of the day. Proper inflation is critical to the safe operation of your product and will prolong damage from wear.

Storage

1) Before storing, place the product on a clean, level area. Clean with mild soap and water and allow to dry completely. Apply 303 Protectant to the surface of the tube and spring pad cover before deflating.

2) Remove all attachments and store in a sealed water-proof container (i.e. a plastic covered box or bin).

3) Remove ALL of the air from the tube using the deflation end of the high output inflator/deflator.

4) Fold the deflated tube in thirds then roll loosely.

5) Store the product out of direct sunlight and protected from the environment in a clean, dry location. It is best to store inside a container with moth balls to prevent damage from rodents. NEVER store uncovered, in a damp location, or on a concrete surface! NEVER store at temperatures below 40 degrees F.



NOTICE! - Release of Liability, Claim Waiver, and Assumption of Risk Agreement

By opening and assembling this product, you are agreeing (1) to be bound to the terms set forth below and (2) to require anyone using this product to be bound by such terms. If you are unwilling to be bound by these terms, return this product (before use) for a full refund.

ASSUMPTION OF RISK: Use of this product and any of its components involves certain inherent risks, dangers, and hazards which can result in serious personal injury and death. In using the product, you freely agree to assume and accept any and all known and unknown risks of injury while using this equipment. The risks inherent in the sport can be greatly reduced by abiding by the Warning Guidelines listed in this Owner's Manual and by using common sense.

RELEASE AND WAIVER OF CLAIMS AGREEMENT: In consideration of the sale of the product to you, you hereby agree to the fullest extent permitted by law as follows:

TO WAIVE ANY AND ALL CLAIMS that you have or may in the future have against North Sports Inc., and Aquaglide Inc., its distributors and dealers, resulting from use of this product and any of its components.

TO RELEASE North Sports, Inc. and Aquaglide, Inc. from any and all liability for any loss, damage, injury, or expense that you or any users of this product may suffer, or that your next of kin may suffer, as a result of the use of this product, due to any cause whatsoever, including negligence or breach of contract on the part of North Sports Inc. and Aquaglide Inc. in the design or manufacture of this product and any of its components.

ARBITRATION: In further consideration of the sale to you of this product and any of its components, you hereby agree to submit to binding arbitration any and all claims which you believe you may have against North Sports Inc. and Aquaglide Inc. arising from the use of any North Sports Inc. and Aquaglide Inc. equipment or products. The arbitration shall be pursuant to the rules of the American Arbitration Association. Arbitration shall be commenced within (1) year from the date on which any alleged claim first arose. Further, the arbitration shall be held in White Salmon, Washington unless otherwise mutually agreed to by all parties. The submission to the American Arbitration Association shall be unlimited and the arbitration award may be enforced by any Court of competent jurisdiction.

BINDING EFFECT OF AGREEMENT: In the event of your death or incapacity, this Agreement shall be effective and binding upon your heirs, next of kin, executors, administrators, assigns, and representatives.

ENTIRE AGREEMENT: In entering into this Agreement, you are not relying upon any oral or written representations other than what is set forth in this agreement and the North Sports Inc. and Aquaglide Inc. Owner's Manual.

Warranty

Aquaglide, Inc. warrants products to be free of defects in material or workmanship to the original purchaser for a period of (3) years from date of purchase. This warranty is subject to the following limitations:

1. Warranty is valid only with dated proof of purchase in the form of the original invoice.

2. Warranty is valid only when the product is used for normal recreational activities, and does not cover use in schools or rental operations. Warranty term for commercial use is 1 year.

3. Aquaglide will make the final warranty determination which may require inspection and/or photos of the product which clearly show defect(s). We require the above be sent to another location of our choice, freight prepaid, or by email to support@aquaglide.net.

4. If a product is deemed to be defective by Aquaglide, the warranty covers the repair or replacement of the defective product only. Aquaglide will not be responsible for any costs, losses, or damages incurred as a result of loss of use of product.

5. This warranty does not cover damage caused by misuse, abuse, neglect, or normal wear and tear, including, but not limited to, punctures, dragging the product over the ground, damage due to excessive sun exposure or seam failure due to overinflation in the sun, damage caused by improper handling and storage, damage caused by use in waves or shore break, and damage caused by anything other than defects in materials and workmanship.

6. This warranty is voided if any unauthorized repair, change, or modification has been made to any part of the equipment. Authorization for such must come in writing from Aquaglide.

7. The warranty for any repaired or replacement equipment is good from the date of the original purchase only.

8. Any warranty claims must be accompanied by the original purchase receipt. The name of the retailer and date of purchase must be clear and legible.

9. There are no warranties which extend beyond the warranty specified here.

Returns and Service Policy

Product can be returned only if a return authorization number (RA) is given by Aquaglide in advance. The RA number must be on the outside of the package or it will not be accepted at our warehouse. Freight on the returned product must be prepaid or it will not be accepted. Upon receipt, Aquaglide will make a determination within (30) days. If the product is covered under warranty it will be returned to the customer at the expense of Aquaglide, Inc. after repairs can be made. If not, the customer will receive a quote for repair and/or replacement as well as any necessary cleaning and shipping charges. The customer will have 30 days to accept the quotation. At the end of 30 days, or upon refusal of the quote, Aquaglide will return the product in the condition in which it was received at the customer's expense. The customer agrees to authorize Aquaglide, Inc. to charge the customer's credit card for any costs not covered under the terms and conditions of the Aquaglide Warranty.