



IF THERE ARE UNSATISFACTORY OR MISSING PIECES IN THIS KIT, PLEASE CALL US FIRST BEFORE RETURNING TO VENDOR - 1-800-421-1406 We will replace defective part(s) up to one (1) year from date of purchase with proof of purchase. For more quality products see: www.thebearchair.com



PHONE: (705) 386-0757
FAX: (705) 386-0915
TOLL FREE: 1-800-421-1406

BEFORE ASSEMBLY

1. Remove all parts from the carton.
2. Familiarize yourself with the various parts while reading the instructions thoroughly.
3. Give yourself plenty of space, making sure the complete chair can be removed from the room.
4. Follow the step by step instructions to ensure easy assembly.
5. We recommend gluing all joints for a long lasting chair. Wood glue or carpenters glue works fine.

BOX 509, SOUTH RIVER, ONTARIO P0A 1X0

A WORD ABOUT NORTHERN WHITE PINE

The White Pine used in this furniture was harvested in Northern Ontario. Pine *must* have a protective finish applied, if left unfinished it will discolour and crack as it dries. Some surface checking may occur due to changing moisture levels but this is typical for a natural product and will not effect the durability.

FINISHING WHITE PINE

For the best finishing results use a good quality exterior stain or paint. You should follow all the manufacturer's directions, including an initial light sanding with 120 grit sandpaper.

We do not recommend using straight spar varnish or varathane - they may look great initially but will weather very quickly and require frequent re-coating. Stains like "Sikken's Cetol 1" provide excellent and long lasting protection. It's a good idea to consult your local paint or stain retailer for advice on the best finish for your geographic location and usage.

A WORD ABOUT WESTERN RED CEDAR

The Western Red Cedar in the chair comes from the Coastal Mountain Regions of Western Canada. It is highly resistant to weathering and will last many decades outdoors without rotting. Cedar can be left unfinished and untreated and will weather to a pleasant gray colour. If however, you wish to retain the rich dark colour of the wood then a protective coating is necessary. If leaving unfinished, we recommend using stainless steel hardware to prevent discolouring of the wood (available as an option).

FINISHING WESTERN RED CEDAR


We recommend lightly sanding with 120 grit sandpaper before applying a finish. We *don't* recommend a glossy hard finish such as *varnish* or *Varathane* on cedar because it may react with the natural oils in the wood. Any exterior wood stain will work well to enrich the colour. Lightly sand and recoat as required. As with pine *Sikkens Cetol 1* is an excellent 2-3 coat system for cedar!

REMEMBER TO USE WOOD GLUE ON ALL JOINTS!




BC950 Angled Tete-a-tete

Visit our website for more info.
www.thebearchair.com
Pour plus d'information, visitez notre site web

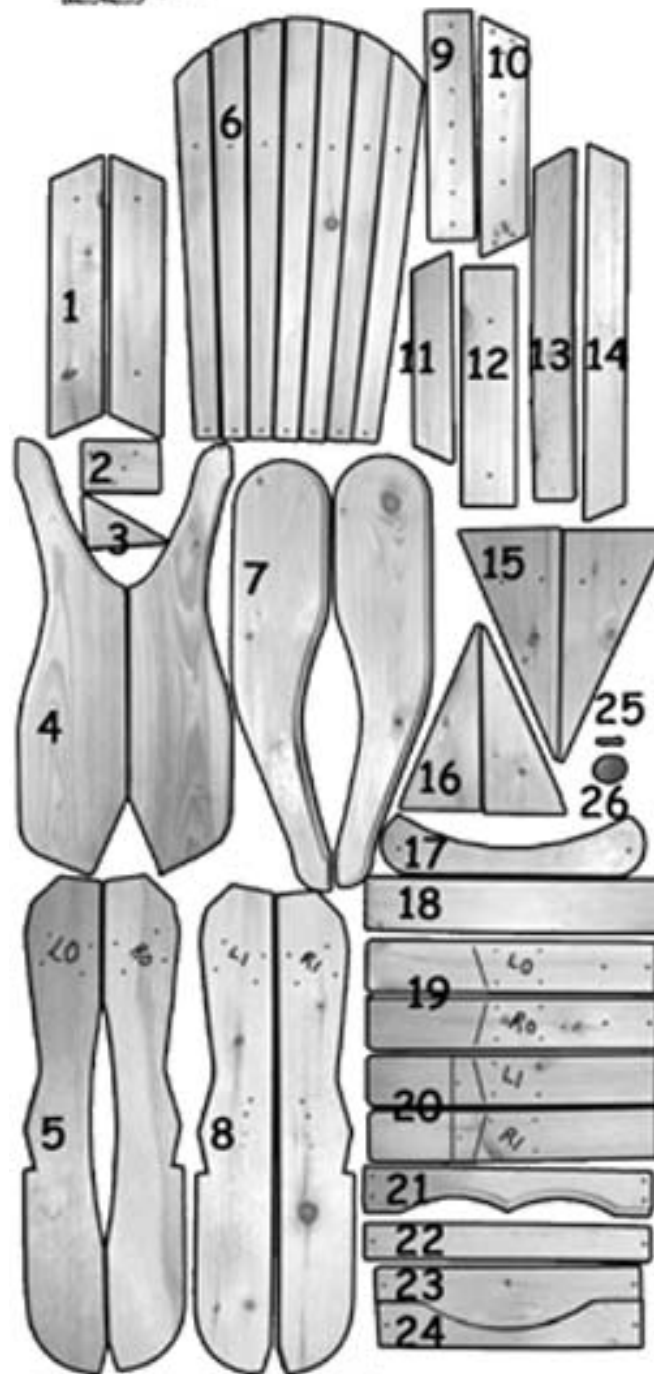


PARTS LIST/LISTE DES PIÈCES		
#	Description	Qty/Qte
1	Angled Shelf Slat/Lame-étagère à angle	2
2	Arm Support/Supports de bras	2
3	Triangle/Triangle	2
4	Inside Arm/Bras Intérieur	2
5	Outside Side/Côté extérieur (LORO)	2
6	Back Slats/Lames de dossier	14
7	Outside Arm/Bras extérieur	2
8	Inside Side/Côté intérieur (LIRI)	2
9	Rear Table Support/Appui arrière de table	1
10	Front Table Support/Appui avant de table	1
11	Front Shelf Support/Appui avant d'étagère	1
12	Shelf Slat/Lame d'étagère	1
13	Struts/Support	4
14	Rear Shelf Support/Appui arrière d'étagère	1
15	Shelf Triangle/Triangle d'étagère	2
16	Table Triangle/Triangle de Table	2
17	Top Back Support	
	/Support supérieur de dossier	2
18	Table Slat/Lame de Table	1
19	Outside Legs/Pied extérieur (LORO)	2
20	Inside Legs/Pied intérieur (LIRI)	2
21	Front Slat/Lame de devant	2
22	Seat Slat/Lames de siège	12
23	Comfort Slat/Lame de confort	2
24	Bottom Back Support	
	/Support inférieur de dossier	2
25	Plated Screws/Vis	148
26	Brass Plaque/Plaque en laiton	2

Assembly Instructions Instructions pour l'assemblage

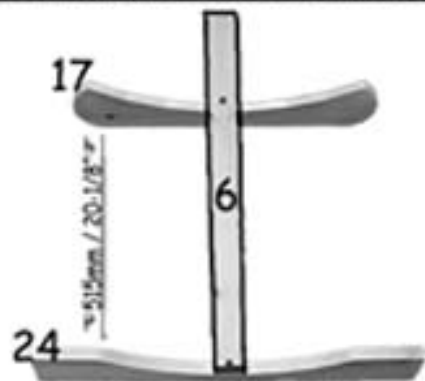

1) Set the bottom back support (#24) and top back support (#17) on a flat surface with the curved sides and countersunk holes facing up. Arrange the seven back slats (#6), with the longest in the centre, on the supports.

Déposer les deux supports arrière de dossier, supérieur (#24) et inférieur (#17), sur une surface plane avec les côtés courbés et les trous fraisés vers le haut. Disposer les sept lames de dossier (#6) sur les supports en mettant la lame la plus longue au centre.

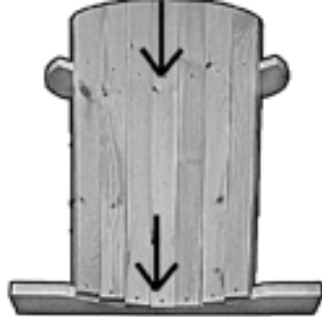


- 2) Push all the slats together so that there is even spacing on each side. Screw only the centre slat down using two screws in the pre-drilled holes.

Pousser toutes les lames ensemble de façon à ce qu'il y ait le même espace de chaque côté des supports. Visser seulement la lame du centre avec deux vis dans les trous pré-perçés




- 3) Space the slats out evenly, from the centre attached slat, so that the shortest outside slats are even with the end of the curve on the back supports, and then attach.

Espacer uniformément les lames de chaque côté de la lame centrale de façon à ce que la lame extérieure la plus courte soit au ras de la courbe des supports arrières. Visser toutes les lames.

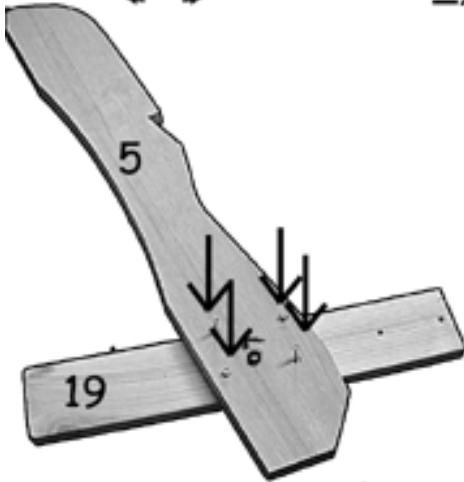


- 4) Attach the legs (#19&20) to the sides (#5&8) using four screws in the pre-drilled holes as shown. Line up the screws with the pilot holes in the leg. Each leg and side are marked either "LO" for left outside, "LI" for left inside, "RO" for right outside and "RI" for right inside and should be matched together.

Attacher les pieds (#19&20) aux côtés (#5&8) avec quatre vis dans les trous pré-perçés en alignant les vis aux fossettes (petits creux) des pieds. Chaque pied et côté sont marqués d'un "L" pour la partie gauche et "R" pour la partie droite; pied et côté devraient être réunis.

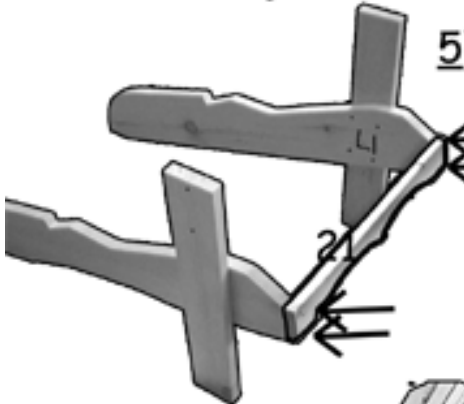

- 5) Place the two sides marked "RO" and "LI" facing each other with the legs on the outside. The "RO" should be on the right side of the chair (as sitting). Attach a front slat (#21) to the front of the sides as shown, using four screws. Repeat with the sides marked "LO" and "RI".

Placer les deux côtés marqués "RO" et "LI" face à face avec les pieds à l'extérieur. L'assemblage du côté marqué "RO" doit être à droite d'une personne assise. Fixer la lame du devant (#21) sur le bout des côtés tel qu'indiqué sur le schéma, avec quatre vis. Répéter avec les côtés marqués "LO" et "RI".

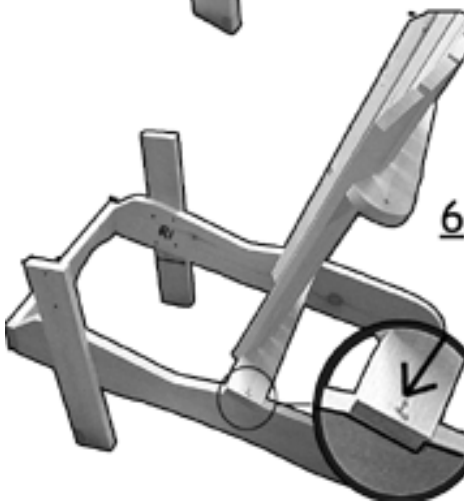

- 6) Place a back assembly into the cut out area on the sides as shown - attach with two screws through the pre-drilled holes.

Placer l'assemblage du dossier sur les côtés en avant de la coupure tel qu'indiqué sur le schéma; visser les deux vis dans les trous pré-perçés